Commander Essentials Cordless W56H




Quick Installation Guide

Please read carefully before use.



Packaging Contents

The following items are included in your W56H package:

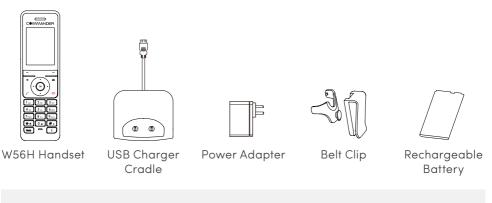


Note: We recommend that you use the accessories provided or approved by Commander. The use of unapproved third-party accessories may result in reduced performance.

Assembling the DECT Phone

1. Insert the battery into the handset, as shown below:




2. Connect the charger cradle and charge the handset, as shown below:

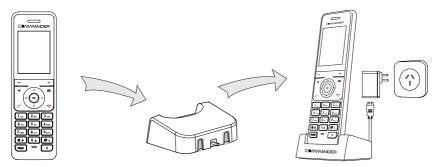

Note: The handset should be used with an original power adapter only. The use of a third-party power adapter may cause the damage to the handset. The charging status of the handset is indicated in the top right-hand corner of the LCD screen.

3. Attach the Belt Clip, as shown below if required:

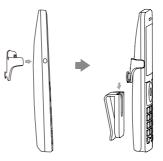

4. Handset Registration

The handset in this package is not pre-registered to the base station.

Please follow the steps below:

- If the handset LCD screen prompts "Search for Base", long press I on the base station until the first LED flashes. Then press the OK key to enter the main menu, and select Settings -> Registration->Register Handset to register the handset.
- If the handset LCD screen prompts "Press base page 2s then press **OK**", long press **I** on the base station till the first LED flashes. Then press **OK** soft key on the handset.
- Select the desired base (Most likely Base 1) and once search is complete, press **OK** to subscribe to the base. When prompted for a password, enter '0000' or '1234' depending on the configuration of the base station.

If you require assistance, please call the Commander Phone team on 1300 638 208, or email us at commanderphone@commander.com.



Level 10, 452 Flinders St Melbourne VIC 3000 ABN 85 136 950 082