



# Changing the Commander BCM50, BCM 200/400 V4.0 & BCM 450 Time and Date

- > Log in to the BCM using Element Manager
- > Select the “Configuration” Tab
- > Select “System” and the “Date and Time” from the Menu
- > Select the Drop Down menu from the Date and Time option
- > You will then be able to set date or time for the BCM
- > Select OK when complete

File Edit View Network Session Tools Help

Exit Cut Copy Paste Web Page Validate Device Disconnect Refresh Auto-refresh

Task Navigation Panel

Configuration Administration

Welcome

System

- Identification
- Date and Time
- Keycodes
- IP Subsystem

Administrator Access

- Resources
- Telephony
- Data Services
- Applications

Date and Time

Date and Time Source: NTP

Network Time Protocol Settings

NTP server address: 203.191.160.68

Synch every (s): 2048

NTP security mode: Unsecured

Raise alarm if clock differs by at least (s): 10

NTP key ID: 0

NTP key string:

Modify...

Current Date and Time

Date and time: 2009-09-02 14:57:10

Time zone: September 2009

Daylight Savings Time:

S	M	T	W	T	F	S
		1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30			

Time: 2:57:10 PM

OK Cancel

Done. C:0 M:0 I:41 W:42 Include ACKed alarms