



Changing the Commander NT40 Time and Date


Set Time and Date:

Programming Overlay:



When you begin programming, a group of keys on the key station become the keys for moving through programming headings and settings. The programming overlay is a paper cutout that shows what the four keys do during programming.

Placing the programming overlay:

Advantage Keystation

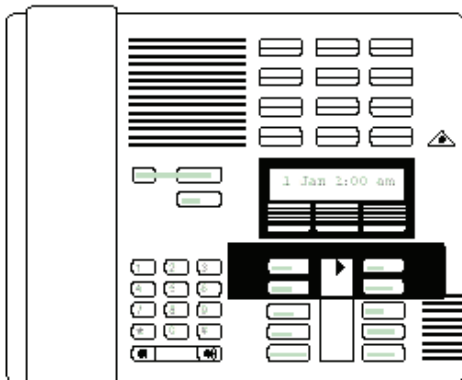

Principal Keystation

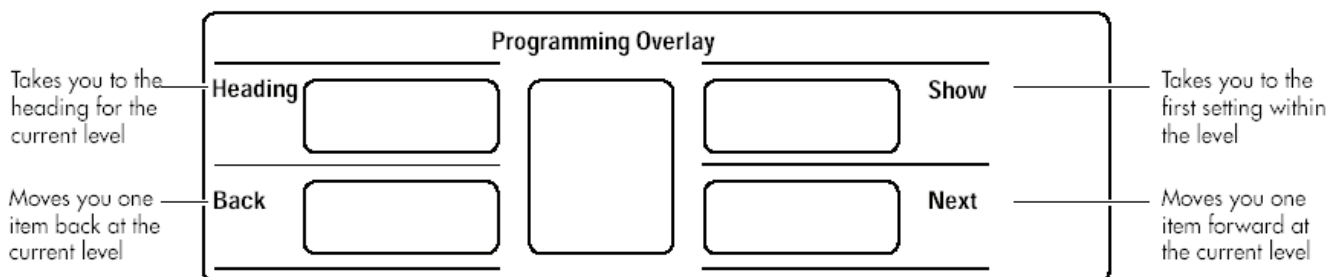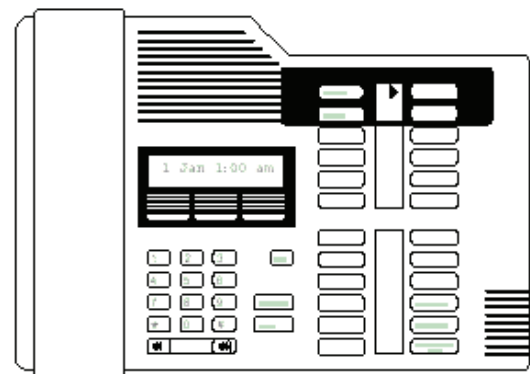

Begin the programming session:

1. Press
2. Press
3. Press
4. Press five times
5. Press
6. Press dial key pad to enter the hour
7. This will display if you have entered a number less than 12
8. Press
9. Press
10. Press dial keys to enter minutes
11. Press
12. Press
13. Press dial keys to enter year
14. Press
15. Press
16. Press dial keys to enter month
17. Press
18. Press
19. Press dial keys to enter day
20. Press to end your session

Display will show

Feature:
Password:
Time & Date:
Hour:01 NEXT CHANGE
Hour: CANCL
AM OK CHANGE
Hour 13 NEXT CHANGE
Minutes: 00 NEXT CHANGE
Minutes: __ CANCL
Minutes: 30 NEXT CHANGE
YEAR: 99 NEXT CHANGE
YEAR: __ CANCL
Months: 01 NEXT CHANGE
Months: CANCL
Months: CANCL
Day: 01 NEXT CHANGE
Day: 15 NEXT CHANGE
End of session